


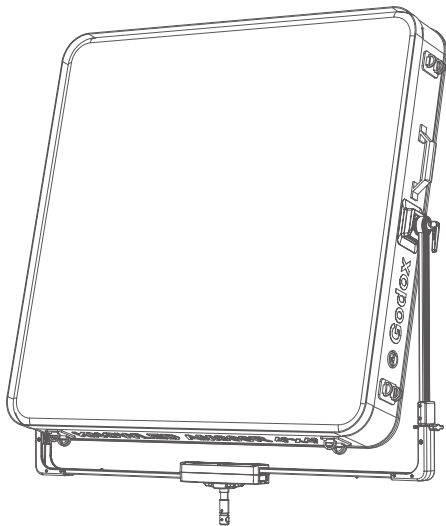

AM800R

使用手册

Instruction Manual V1.0

固件 / Firmware V1.00

目录

重要安全说明	01
物品清单	02
部件名称	03
使用说明	05
附件安装	05
灯体收纳与模块更换	10
接口连接	11
控制面板操作	13
模式设置	13
菜单设置	15
应用程序连接指南	18
照度数据	20
技术参数	22
维护保养	22
产品保修	48
产品信息	48
保修期	48
如何获得保修服务	48
不适用保修情况	49
产品保修和服务支持信息	49

重要安全说明

使用前请务必仔细阅读本手册，并严格遵守以下安全注意事项。



危险

- 本设备为摄影灯具，禁止儿童单独使用。儿童靠近时，监护人需全程密切看护，防止因碰撞或擅自操作引发人身伤害。
- 若外壳出现开裂、变形、进液、异味或异常发热等情况，请立即停止使用。
- 仅限使用原厂配件，或经制造商明确推荐的配件；否则可能导致火灾、电击或人身伤害。
- 设备线缆较长，请合理布置并固定于安全位置，避免接触高温表面；谨防因放置不当造成线缆拉扯损坏、绊倒现场人员。
- 本设备必须接入具备可靠接地功能的电源插座；在断开或重新连接电源线前，先切断设备电源；严禁在通电状态下进行电源线的插拔操作。



警告

- 严禁在酒精、汽油等易燃易爆气体或液体附近使用本设备。
- 严禁遮挡或堵塞设备散热孔，以防过热引发危险。
- 严禁私自拆卸或改装设备。非授权拆解易导致电路故障或永久性损坏。如需维修，请联系神牛授权服务中心。



请勿直视光源

 
取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

物品清单


AM800R 44K



灯体 ×1
(AM44R)



 充气蝶布框 ×1
(AF44)



格栅 ×1
(AF44G)



 
柔光布 ×1
(AM800R 4'x4'D11-32)




柔光布 ×1
(AM800R 4'x4'D11-32+)



柔光布 ×1
(AM800R 4'x4'D13-30+)



控制器 ×1
(AM800R)

 

折叠 U 架 ×1
(AMY44)



航空箱 ×1



充气泵 ×1



修补套装 ×1



交流电源线 ×1




使用手册 ×1

注:

1. 开箱后核对所购套装内的物品, 若有缺失或破损, 及时联系经销商。
2. 图示仅供参考, 具体以实际产品为准。


部件名称

充气蝶布框

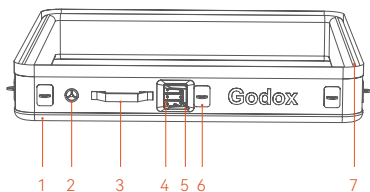


1. 魔术贴
2. 气阀
3. 把手
4. 附件安装槽
5. 锁扣
6. D 扣
7. 拉链

灯体

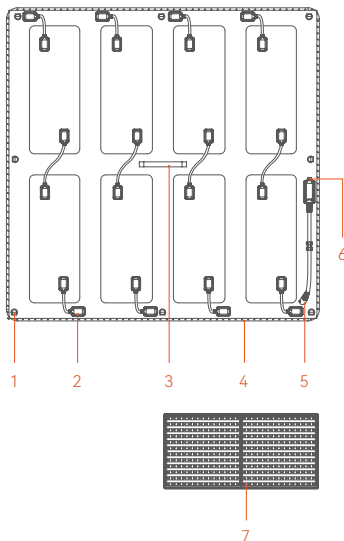


1. D 扣
2. 接线保护盒
3. 把手
4. 拉链
5. 直流电源线
6. 附件通讯接口
7. 灯珠（模块 ×8）

控制器

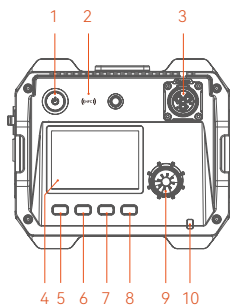

1. 电源键
2. NFC 感应区
3. DC OUTPUT 接口
4. 显示屏
5. PRESET 键
6. LOCK 键
7. MENU 键
8. MODE 键
9. 调节旋钮
10. 无线 DMX 状态指示灯

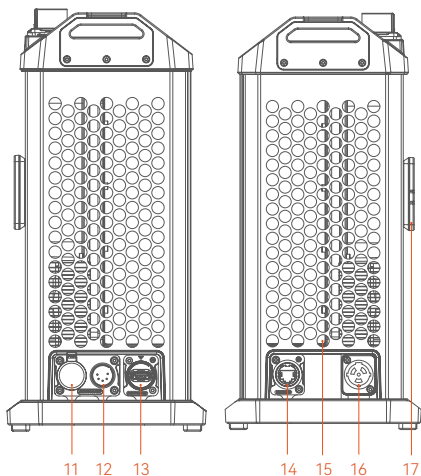


11. DMX OUT 接口
12. DMX IN 接口
13. USB-A 接口
14. LAN 接口
15. 散热孔
16. AC INPUT 接口
17. 固定装置

使用说明


1. 附件安装

1.1 充气蝶布框


蝶布框保持未充气状态，拉链朝上平铺于洁净台面；将蝶布框灰色拉链与灯体灰色拉链对齐，再闭合四周全部拉链。

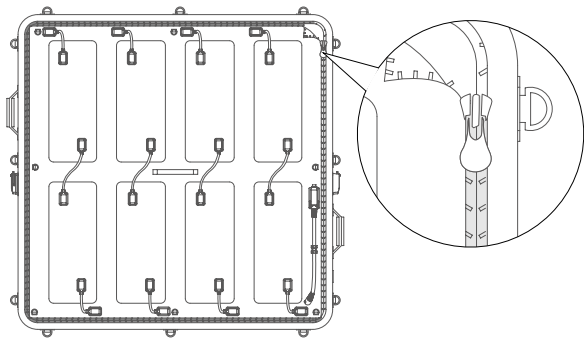


充气蝶布框气阀配有锁环：按压锁环旋转 90° 至低位，阀门开启泄气；再次按压旋转 90°，锁环回弹密封，即可充气。

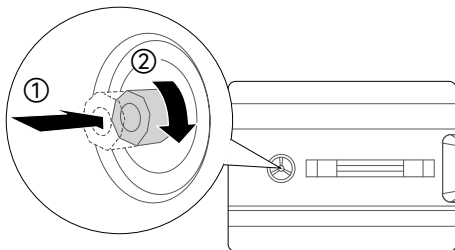

将充气泵气管插入气阀并顺时针旋紧，充气泵开机设定气压 8Psi，短按充气键启动充气，达到设定气压自动停止。

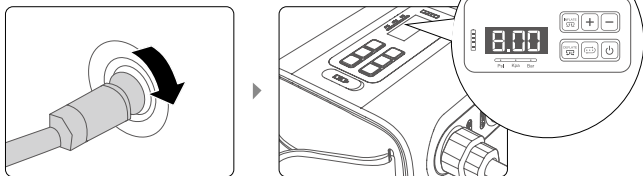


充气完毕，将充气泵关机并拔下气管，顺时针旋紧气阀盖即可。

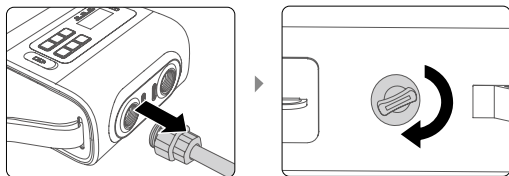

注：充气后请勿操作拉链，以免部件损坏。


1.2 柔光布 / 格栅

通过魔术贴粘贴于充气蝶布框，可按需多层叠加使用。



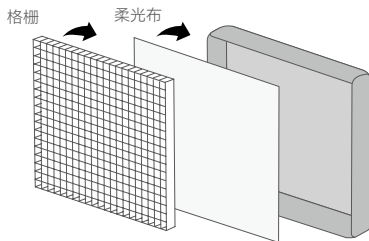


1.3 折叠 U 架


- 使用前将 U 架平稳放置在水平台面上，避免放置在倾斜、光滑易打滑的表面，防止操作时倾倒滑落；
- 逆时针旋松四个固定旋钮，先打开 U 架左右支臂至展开状态后顺时针旋紧两个固定旋钮；
- 横向抽拉两侧伸缩臂完成宽度拓展， 到位后旋紧两个固定旋钮；

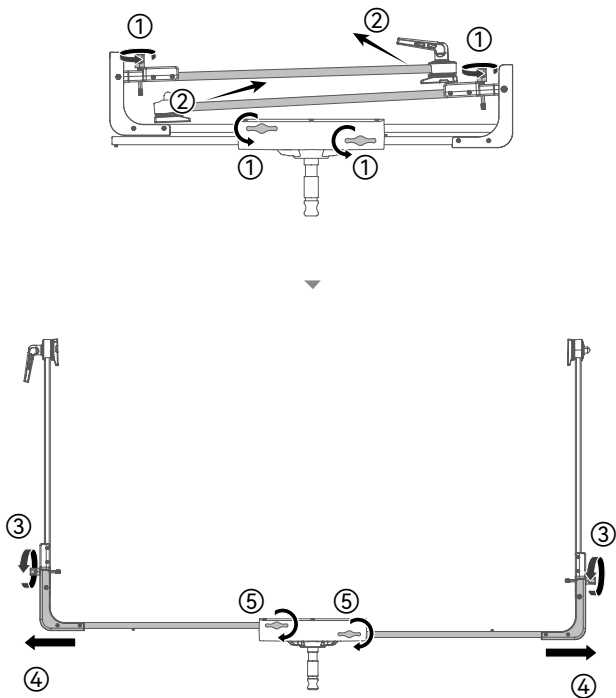

- 将充气蝶布框两侧的锁扣拨开，U 架对准附件安装槽卡入，回拨锁扣固定，套筒插入灯架（另购）并锁紧。

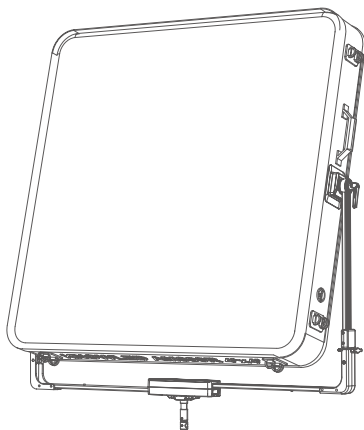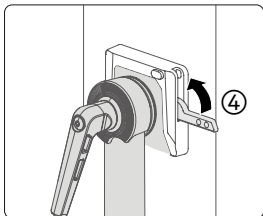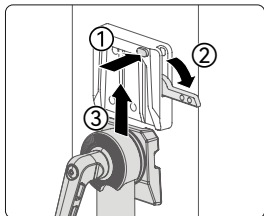


- 收纳时，将折叠U架取出，旋松四个固定旋钮，先向内推回两侧伸缩臂，再收拢左右支臂（俯仰锁紧把手朝上摆放），最后逐一旋紧四个固定旋钮。

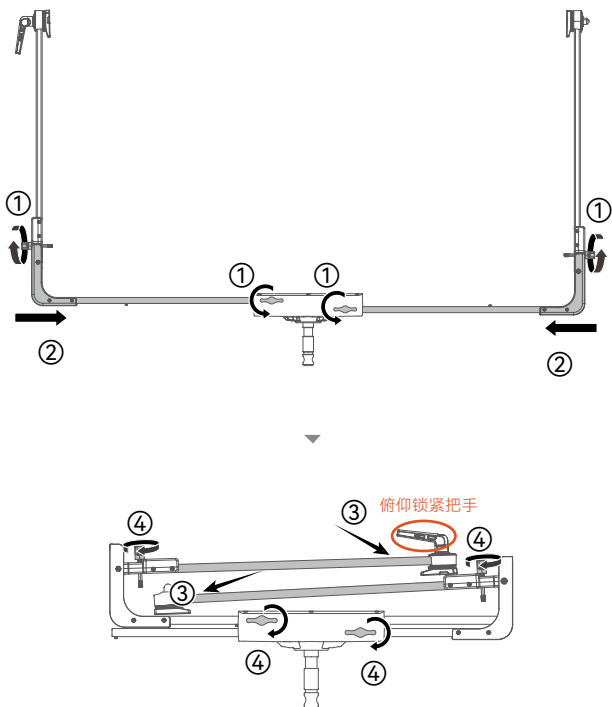

1.4 修补套装

- 充气蝶布框破损时，取出修补套装，于漏气位置均匀涂胶；
- 补丁贴单面涂胶，静置 2 分钟后贴合破损处，热风加热并按压抚平，防止产生气泡、褶皱。

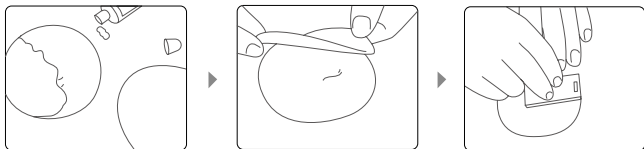


2. 灯体收纳与模块更换

2.1 收纳


- 灯珠面朝下放置在平整洁净台面；



- 对照示意图从中间对折，使下层灯珠互相贴合，折好后整体向右平放；


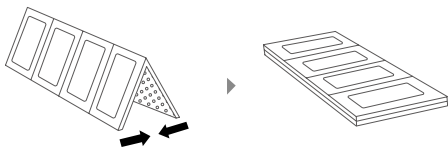


- 再依次对折首尾两端，灯体侧面呈 M 字形，两端折叠完毕后再次中间对折。

 


2.2 模块更换

- 单片灯体模块配有两处接线保护盒，拧下盒体螺丝，拨开连接线，即可撕下旧模块；
- 取全新灯体模块贴牢魔术贴，接好线束，装回保护盒锁紧螺丝即可。

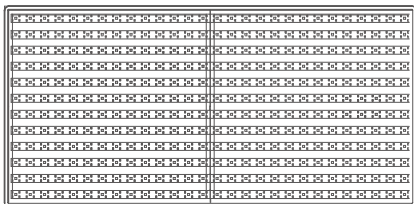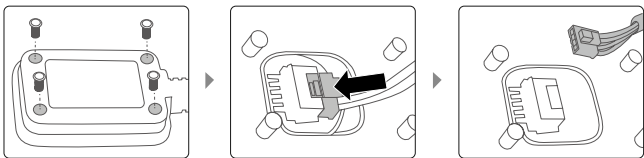

3. 接口连接


3.1 DMX 接口

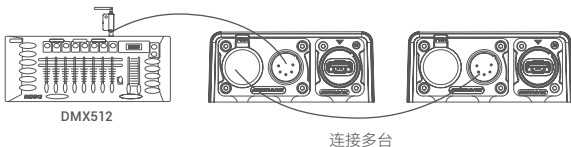

注：仅展示连接 DMX512 控制台方式，控制台及连接线需另购。

3.2 供电接口

控制器 DC OUTPUT 接口接入灯体直流电源线，AC INPUT 接口接入交流电源线后另一端接入插座供电。

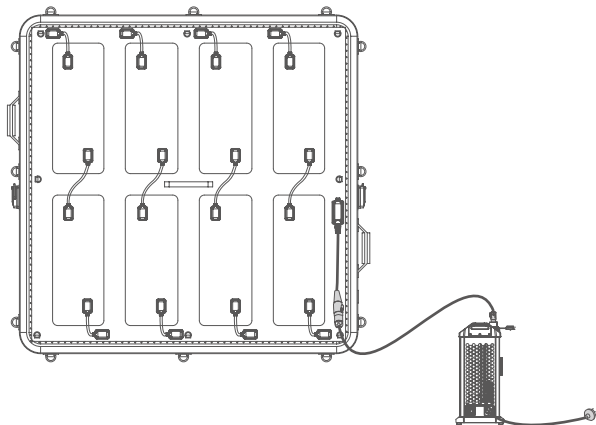

4. 控制面板操作

部件	操作	说明
电源键	短按	开机或关机
MODE 键	短按	进入模式选择界面
MENU 键	短按	进入菜单选择界面
调节旋钮	旋转	切换选项或增减参数值
	短按	确认选择或退出当前设置
PRESET 键	短按	进入参数预设界面（20组）
LOCK 键	短按	锁定或解锁控制器面板操作

5. 模式设置

短按 MODE 键进入模式选择界面，旋转并短按调节旋钮进入其中一项设置。

5.1 CCT 模式

亮度范围：0.0% ~ 100.0%

色温范围：1800K ~ 10000K

GM 范围：-100% ~ +100%

5.2 HSI 模式

亮度范围：0.0% ~ 100.0%

色相范围：0° ~ 360°

饱和度范围：0% ~ 100%

5.3 RGBW 模式

亮度范围：0.0% ~ 100.0%

独立控制红、绿、蓝、白四路通道：0.0% ~ 100.0%

5.4 GEL 模式


亮度范围：0.0% ~ 100.0%

色片类型：R-GEL/L-GEL

R-GEL 色片组：COR./CAL./SPC./CINE.

L-GEL 色片组：COR./COLOR./600/COS./700

色温选项：3200K 或 5600K

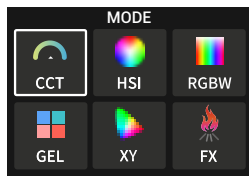

色相范围: $-10^{\circ} \sim 10^{\circ}$

饱和度范围: $-20\% \sim 20\%$

5.5 X-Y 模式

亮度范围: $0.0\% \sim 100.0\%$

X 坐标: $0.0000 \sim 0.8500$

Y 坐标: $0.0000 \sim 0.8500$

颜色温度或颜色空间: Gamut、Rec.2020、

DCI-P3、Rec.709、Black body

5.6 FX 模式

选中一类光效，短按调节旋钮进入参数调节。

光效	亮度	颜色	色温 / 色相	速度	其他
闪光灯	0.0% -100.0%	CCT/HSI	1800K-10000K /0-360°	1-100	模式: 闪光灯 / 镁光灯 触发: 自动 / 手动
雷闪电		/	1800K-10000K	/	闪烁次数: 随机 /1-10 频率: 随机 /2-20 触发: 自动 / 手动
多云		/	/	随机 /1-100	亮暗比例: 10%-90%
坏灯泡		CCT/HSI	1800K-10000K /0-360°	1-100	/
电视机		CCT/HSI	/	1-100	/
蜡烛		/	/	1-100	/
火		/	/	1-100	/
烟花		/	/	1-100	余烬: 1-100
爆炸		CCT/HSI	1800K-10000K /0-360°	1-100	余烬: 1-100 触发: 自动 / 手动
焊接		CCT/HSI	1800K-10000K /0-360°	1-100	/
警车		红+蓝、红、 蓝、蓝+白、 蓝+黄、黄、 红+白+蓝、 红+黄+蓝	/	/	模式: 1-5

光效	亮度	类型	色温 / 色相	速度	其他
SOS	0.0% -100.0%	CCT/HSI	1800K-10000K /0-360°	/	/
彩光循环		/	/	1-100	饱和度: 0%-100%
派对		/	/	1-100	饱和度: 0%-100%

注：所有光效均可设置开启或关闭；触发方式设为手动时，短按调节旋钮可触发一次光效。

6. 菜单设置

短按 MENU 键进入菜单选择界面，旋转并短按调节旋钮进入其中一项设置。

图标	功能	选项		说明
	DMX	地址	001-512	起始地址
		DMX 模式	01: CCT 8 Bit	8 位 CCT 模式
			02: HSI 8 Bit	8 位 HSI 模式
			03: RGB 8 Bit	8 位 RGB 模式
			04: RGBW 8 Bit	8 位 RGBW 模式
			05: X-Y 8 Bit	8 位 X-Y 模式
			06: CCT+HSI 8 Bit	8 位 CCT+HSI 模式
			07: CCT+RGBW 8 Bit	8 位 CCT+RGBW 模式
			08: FX 8 Bit	8 位 FX 模式
			09: GEL 8 Bit	8 位 GEL 模式
			10: CCT 16 Bit	16 位 CCT 模式
			11: HSI 16 Bit	16 位 HSI 模式
			12: RGB 16 Bit	16 位 RGB 模式
			13: RGBW 16 Bit	16 位 RGBW 模式
			14: X-Y 16 Bit	16 位 X-Y 模式
			15: FX 16 Bit	16 位 FX 模式
			16: GEL 16 Bit	16 位 GEL 模式
			17: ULTIMATE 8 Bit	8 位 ULTIMATE 模式
			18: ULTIMATE 16 Bit	16 位 ULTIMATE 模式
		RDM 状态	开启	开启后控制台可设置灯具地址及 DMX 模式
			关闭	关闭 RDM
		DMX 丢失状态	保持最后状态	失去 DMX 控制信号后，在关机或再次接收有效 DMX 控制信号前，持续使用最后一次接收的 DMX 控制信号。
			直接关闭	灯具直接熄灭

图标	功能	选项		说明
	DMX	DMX 丢失状态	保持最后状态 2 分钟熄灭	失去 DMX 控制信号后，持续使用最后一次接收的 DMX 控制信号 2 分钟，2 分钟后灯具熄灭。注：如 2 分钟内接收到有效 DMX 控制信号，则使用新的 DMX 控制信号。
		终止开关	开启	开启 DMX 终端
			关闭	关闭 DMX 终端
		增强通道	开启	开启增强通道信号
			关闭	关闭增强通道信号
		DMX 通道表	(扫描二维码查看)	
	CRMX	CRMX	开启	开启 CRMX
			关闭	关闭 CRMX
		重置	重置 CRMX	
		连接状态	/	
	蓝牙	开	开启蓝牙	
		关	关闭蓝牙	
		重置	重置蓝牙	
		MAC 码	便于查找灯具	
	以太网	网络模式	DHCP	启用 DHCP 模式
			Art-Net 2.x	启用 2.B.C.D 网络
			Art-Net 10.x	启用 10.B.C.D 网络
			手动	可手动设置 IP、子网掩码、默认网关。
		IP	AAA.BBB.CCC.DDD	启用 DHCP 模式：IP 地址由 DHCP 自动分配。
				启用 Art-Net 2.x 模式：IP 地址为 2.B.C.D。
				启用 Art-Net 10.x 模式：IP 地址为 10.B.C.D。
				启用手动模式：IP 地址四段均可自定义，取值范围 0-255（AAA、BBB、CCC、DDD 均为 0-255）。
		子网掩码	255.BBB.CCC.DDD	启用 DHCP/Art-Net 2.x/Art-Net 10.x：子网掩码 255.BBB.CCC.DDD，不可通过菜单更改。
				启用手动模式：AAA = 0-255 BBB = 0-255 CCC = 0-255 DDD = 0-255。
		默认网关	AAA.BBB.CCC.DDD	启用 DHCP 模式：默认网关由 DHCP 分配。
				启用 Art-Net 2.x 模式：默认网关为 2.B.C.D。
				启用 Art-Net 10.x 模式：默认网关为 10.B.C.D。
				启用手动模式：AAA = 0-255 BBB = 0-255 CCC = 0-255 DDD = 0-255。

图标	功能	选项		说明
	Art-Net & sACN	Art-Net&sACN	自动 / Art-Net / sACN / 关	自动：接受 Art-Net 及 sACN 两种协议。 Art-Net：仅接受 Art-Net 协议。 sACN：仅接受 sACN 协议。 关：不接受任何网络协议。
		Art-Net Net	0-127	选择 Art-Net 网络
		Art-Net Sub-Net	0-15	在 Art-Net 网络中选择 Art-Net 子网
		Art-Net Port	0-15	Art-Net 端口
		Art-Net Universe	0-32767	Art-Net 域
		sACN Universe	1-63999	sACN 域
	附件控制	/		具体设置以当前连接附件自身支持的功能为准
	调光曲线	线性		/
		S 曲线		
		指数		
		对数		
	平滑度	默认		亮度数据进行基础平滑处理，实现平滑调光，缩短响应时间。
		平滑		亮度数据进行平滑处理，实现超平滑调光，响应时间慢。
		平滑关		未对亮度数据进行平滑处理，响应时间最快。
	控制模式	常规		适合正常调光，整个调光范围内都很好，不太会出现闪烁。
		低亮		适合电视 / 电影调光，低亮度水平时很好，可能出现闪烁。
		高速		不支持调光，无闪烁。
		频率（默认 / 1-10）		仅常规 / 低亮模式下支持调节
	色域空间	原始色域		/
		校色色域		
		Rec.709		
		DCI-P3		
	屏幕设置	屏幕亮度：10%-100%		/
	语言	简体中文		设置界面语言
		English		

图标	功能	选项	说明
	版本与升级	/	1. 在神牛官网下载新固件至 U 盘。 2. 关机状态下，将存有新固件的 U 盘插入 USB-A 接口。 3. 开机，灯具进入升级界面，升级完成后自动返回主界面。 注： 1. 固件需从官网下载，U 盘根目录仅能存放单个 BIN 格式文件。 2. USB-A 接口支持供电输出（5V = 1.5A），请勿接入大功率 USB 设备。
	恢复出厂设置	取消	/
		确认	确认后，所有参数还原至出厂默认值；设备自动重启，亮度重置为 100%。
	灯具信息	/	查看型号 / 固件版本等信息

应用程序连接指南

“Godox Light”

扫描二维码或在应用商店搜索“Godox Light”下载安装。

蓝牙重置

进入菜单 > 蓝牙 > 确认重置。

蓝牙配对

打开应用程序，选择“蓝牙添加”，搜索并连接灯具。

NFC 速连

开启移动设备 NFC 功能，应用程序内选择“NFC 添加”，贴近灯具 NFC 感应区即可自动配对。

固件升级

在应用程序的设备列表中点击 [⋮] 选择固件升级，将自动检测新版本，请按提示操作。



“Godox KNOWLED”

扫描二维码或在应用商店搜索“Godox KNOWLED”
(目前仅限平板下载和使用)。



CRMX BT 转 CRMX

1. 首先通过 CRMX BT，将安卓/iOS 平板与 Godox TimoLink TRX 建立连接；
2. 再将 Godox TimoLink TRX 与 CRMX 灯具建立连接，或与 DMX 灯具（配合 Godox TimoLink RX 使用）建立连接；
3. 最后在“Godox KNOWLED”中配置灯具即可控制。



注: TimoLink TRX/RX 为另购物品。

照度数据

常规模式

色温	测试条件	照度单位	1 m	3 m	5 m	10 m
1800 K	裸灯	lux	9450	1490	504	144
		fc	878	139	47	13
2800 K		lux	19500	3010	1080	309
		fc	1810	279	100	29
3200 K		lux	23300	3570	1270	368
		fc	2160	331	118	34
4300 K		lux	25700	3940	1400	404
		fc	2390	366	130	38
5600 K		lux	25500	3870	1390	402
		fc	2370	360	130	37
6500 K		lux	22100	3360	1210	347
		fc	2050	312	112	32
8500 K		lux	21300	3220	1150	333
		fc	1970	299	107	31
10000 K		lux	22100	3350	1190	345
		fc	2050	311	111	32
R (红光)		lux	3330	512	165	51
		fc	310	48	15	5
G (绿光)		lux	9350	1370	480	135
		fc	869	127	45	13
B (蓝光)		lux	2040	299	106	31
		fc	189	28	10	3

高速模式

色温	测试条件	照度单位	1 m	3 m	5 m	10 m
1800 K	裸灯	lux	11300	1700	580	164
		fc	1050	157	54	15
2800 K		lux	21200	3220	1150	316
		fc	1970	299	107	29
3200 K		lux	26900	4070	1440	399
		fc	2500	378	134	37
4300 K		lux	30000	4550	1610	445
		fc	2790	423	150	41
5600 K		lux	27300	4130	1460	404
		fc	2540	384	136	38
6500 K		lux	24400	3700	1320	360
		fc	2270	344	123	34
8500 K		lux	23700	3590	1270	348
		fc	2200	333	118	32
10000 K		lux	24100	3630	1280	354
		fc	2240	337	119	33
R (红光)		lux	3330	512	165	51
		fc	310	48	15	5
G (绿光)		lux	9350	1370	480	135
		fc	869	127	45	13
B (蓝光)		lux	2040	299	106	31
		fc	189	28	10	3

注: 文中数据均为 100% 亮度下的平均测试值。

技术参数

产品名称	诺力全彩 LED 影视气垫灯
产品型号	AM800R
AC INPUT 接口	100V-240V ~ 50/60Hz, 900W (Max.)
色温范围	1800K ~ 10000K
GM 范围	-100% ~ 100%
亮度范围	0.0% ~ 100.0%
调光曲线	线性 / S 曲线 / 指数 / 对数
FX 光效	14 类
CRI $\approx$	96
TLCI $\approx$	98
灯体 / 控制器防护等级	IP65
控制方式	DMX/RDM、CRMx、以太网、应用程序、控制器控制
蓝牙控制距离	最远 60 米
USB-A 接口	固件升级 /5V = 1.5A 输出
工作环境温度	-20°C ~ 45°C
尺寸（不含充气蝶布框及其他附件）	AM44R 灯体: 1230 × 1230 × 20 mm
	AM800R 控制器: 183 × 161 × 338 mm
净重（不含充气蝶布框及其他附件） $\approx$	AM44R 灯体: 6.6 kg
	AM800R 控制器: 6.4 kg

注: 产品设计与规格如有变更, 恕不另行通知。

维护保养

1. 清洁前务必关机并断开电源, 仅可使用干燥软布擦拭, 严禁使用酒精、苯或其他挥发性溶剂。
2. 存放前请断开电源, 待产品完全冷却后, 置于通风干燥、无强磁场干扰的环境。

Contents

Important Safety Instructions	24
What's Inside	25
Names of Parts	26
Operation Instructions	28
Accessory Installation	28
Light Body Storage & Module Replacement	33
Port Connection	34
Control Panel Operations	36
Mode Settings	36
Menu Settings	38
App Connection Guide	41
Illuminance Data	43
Technical Data	45
Maintenance	45
FCC Statement	46
IC Warning	47
Warning	47
Warranty	50
Applicable Products	50
Warranty Period	50
How to Get the Maintenance Service	50
Inapplicable Cases	51
Maintenance and Service Support Information	51

Important Safety Instructions

Please read this manual carefully before use and strictly observe the following safety precautions.



DANGER

- This device is a photography light. Do not allow children to use it alone. When children are nearby, guardians must provide continuous close supervision to prevent personal injury from collision or unauthorized operation.
- Stop using immediately if the housing is cracked or deformed, if liquid enters the device, or if it emits a strange odor or becomes abnormally hot.
- Use only original accessories or accessories specified by the manufacturer. Failure to do so may result in fire, electric shock, or personal injury.
- The device cables are long. Arrange and secure them properly to avoid contact with hot surfaces. Prevent tripping hazards or cable damage caused by improper placement.
- This device must be connected to a power outlet with reliable grounding. Cut off the device power before disconnecting or reconnecting the power cable. It is strictly prohibited to plug or unplug the power cable while the device is powered on.



WARNING

 
- Do not use near flammable or explosive gases or liquids (e.g., alcohol, gasoline).
- Do not block or obstruct the air vents to prevent overheating.
- Do not disassemble or modify the device without authorization. Unauthorized disassembly may result in circuit malfunction or permanent damage. Contact an authorized Godox service center for repairs.



Do not stare at the operating light source.

What's Inside


AM800R 44K



Light Body ×1
(AM44R)



 Inflatable Butterfly Frame ×1
(AF44)



Grid ×1
(AF44G)



 
Diffusion Fabric ×1
(AM800R 4'x4'D11-32)




Diffusion Fabric ×1
(AM800R 4'x4'D11-32+)



Diffusion Fabric ×1
(AM800R 4'x4'D13-30+)



Controller ×1
(AM800R)

 

Folding Yoke ×1
(AMY44)



Flight Case ×1



Air Pump ×1



Repair Kit ×1



AC Power Cable ×1




Instruction Manual ×1

Note:

1. Check the package contents after unboxing. If any items are missing or damaged, contact the dealer immediately.
2. Product images are for reference only. Actual product may vary.


Names of Parts

Inflatable Butterfly Frame

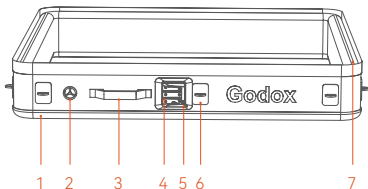


1. Hook-and-Loop Fastener
2. Air Valve
3. Handle
4. Accessory Mounting Slot
5. Latch
6. D-Ring
7. Zipper

Light Body

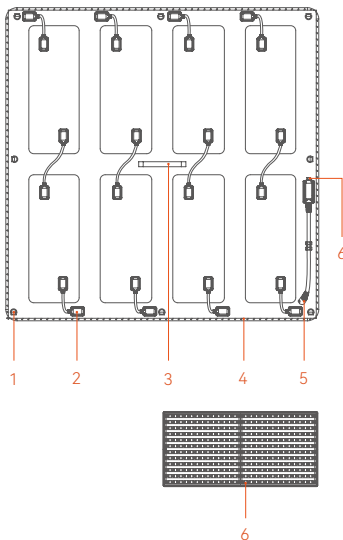


1. D-Ring
2. Wiring Protection Box
3. Handle
4. Zipper
5. DC Power Cable
6. Accessory Communication Port
7. LED Beads (Module× 8)

Controller

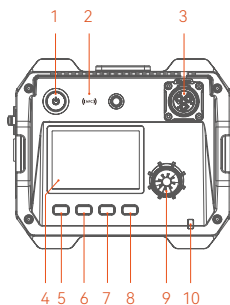

- 1. Power Button
- 2. NFC Detection Area
- 3. DC OUTPUT Port
- 4. Display Screen
- 5. PRESET Button
- 6. LOCK Button
- 7. MENU Button
- 8. MODE Button
- 9. Select Dial
- 10. Wireless DMX Status Indicator

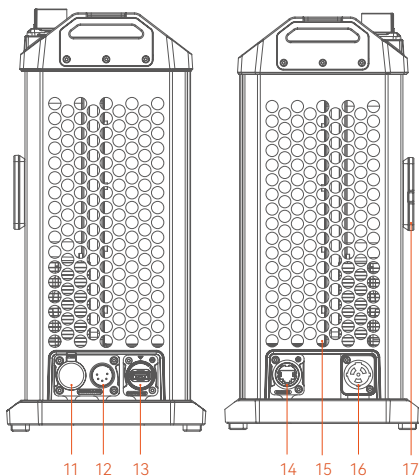


- 11. DMX OUT Port
- 12. DMX IN Port
- 13. USB-A Port
- 14. LAN Port
- 15. Heat Vents
- 16. AC INPUT Port
- 17. Mounting Fixture

Operation Instructions


1. Accessory Installation

1.1 Inflatable Butterfly Frame



Keep the butterfly frame deflated and lay it flat on a clean surface with the zipper facing up. Align the gray zipper on the frame with the gray zipper on the light body, then close all zippers around the perimeter.

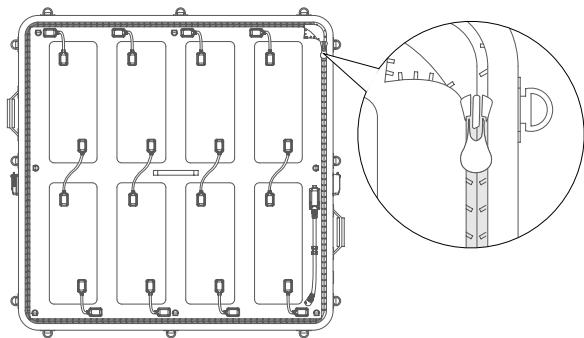



The air valve on the butterfly frame is equipped with a locking ring: press the ring and rotate it 90° to the lower position to open the valve and release air. Press and rotate 90° again; the ring springs back to seal the valve for inflation.

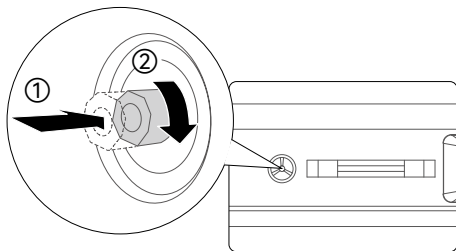

Insert the air pump hose into the valve and tighten it clockwise. Turn on the pump, set the air pressure to 8 psi, and short-press the inflation button to start. Inflation stops automatically when the set pressure is reached.

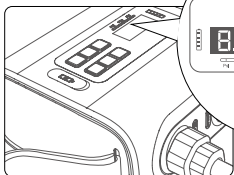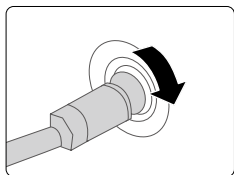


After inflation, turn off the pump, remove the hose, and tighten the valve cap clockwise.

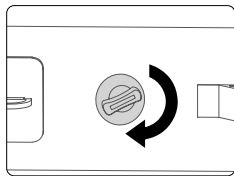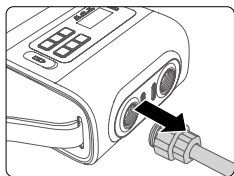

Note: Do not operate the zipper after inflation to avoid component damage.



1.2 Diffusion Fabric / Grid

Attach to the inflatable butterfly frame via hook-and-loop fasteners. Multiple layers can be stacked as needed.



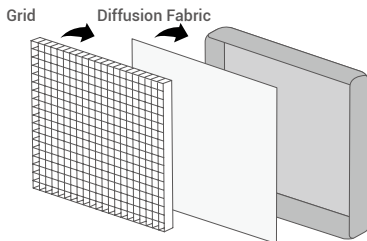


1.3 Folding Yoke



- Before use, place the yoke on a flat, level surface. Avoid slanted, smooth, or slippery, or slippery surfaces to prevent the unit from tipping or sliding during operation.
- Loosen the four locking knobs counter-clockwise. First unfold the left and right arms to the extended position, then tighten the two corresponding locking knobs clockwise.
- Pull the telescopic arms outward horizontally to expand the width; tighten the two locking knobs once in place.

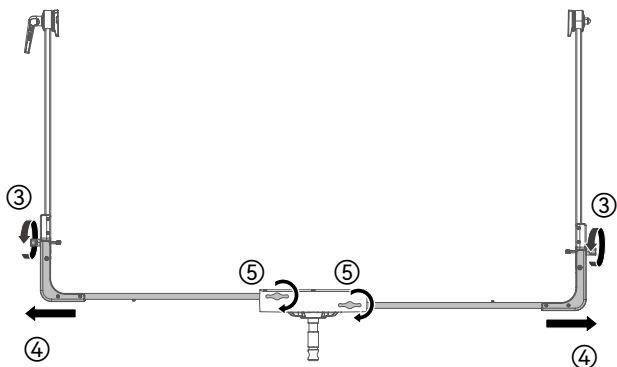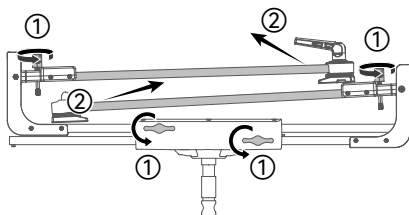

- Unlock the latches on both sides of the inflatable butterfly frame, align the yoke with the accessory mounting slots and insert, then lock the latches back into place. Insert the mounting socket into a light stand (sold separately) and tighten.

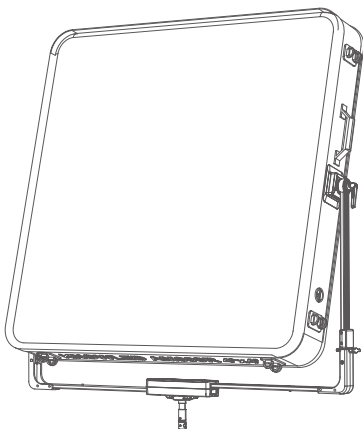
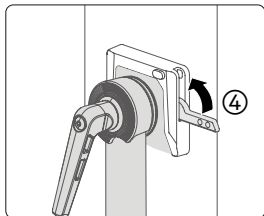
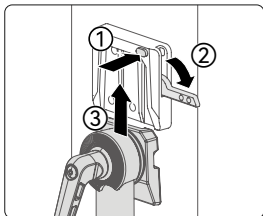


- Storage: Remove the folding yoke. Loosen the four locking knobs, retract the telescopic arms inward, then fold in the left and right arms (keep the tilt locking handle facing upward), and finally tighten the four locking knobs one by one.

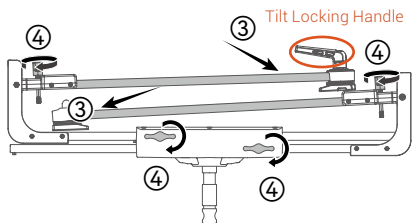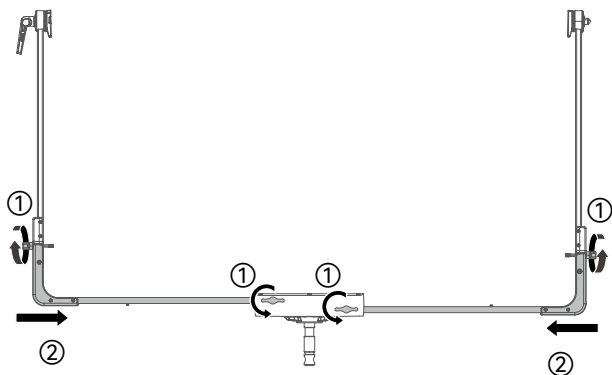

1.4 Repair Kit

- If the inflatable butterfly frame is damaged, take out the repair kit and apply adhesive evenly over the leak.
- The patch is single-side coated with adhesive. Let it sit for 2 minutes, then apply it to the damaged area. Heat with hot air and press smooth to prevent bubbles and wrinkles.

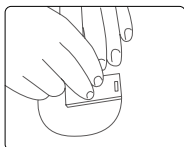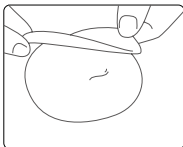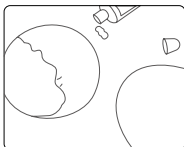



2. Light Body Storage & Module Replacement

2.1 Storage




- Place the light body with the LED beads facing down on a flat, clean surface.



 - Fold it in half from the center according to the diagram so that the lower LED beads meet. Lay the folded unit flat toward the right.


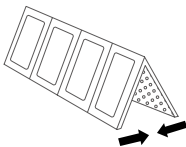


   - Fold both ends inward in sequence so that the side profile forms an M shape, then fold in half at the center again.




2.2 Module Replacement

- Each light module has two wiring protection boxes. Unscrew the box, disconnect the cables, and peel off the old module.
- Affix the new light module securely to the hook-and-loop fastener, connect the wiring harness, reinstall the protection box, and tighten the screws.

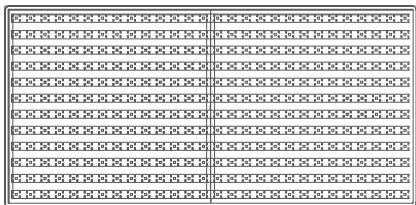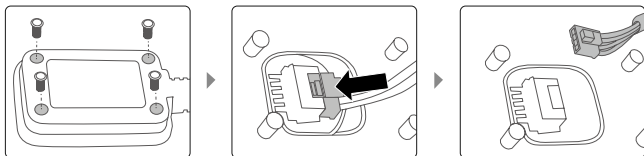

3. Port Connection

 3.1 DMX Port




DMX512

Multi-connection

Note: The above pictures only show the method to connect the DMX512 controller, the controller and the connection cable are sold separately.

3.2 Power Supply Interface

Connect the controller's DC OUTPUT port to the light's DC power cable. Connect the AC INPUT port to the AC power cable, then plug the other end into an electrical outlet.

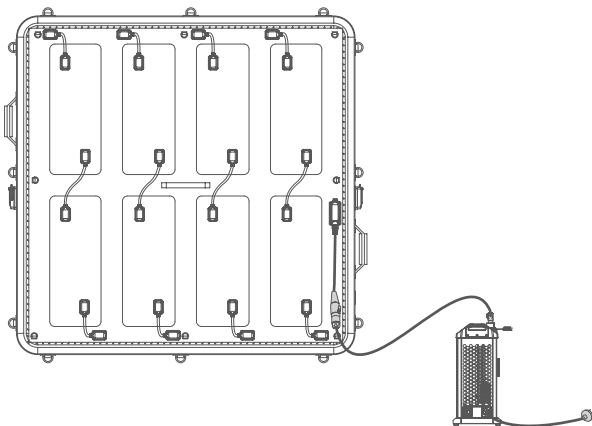

4. Control Panel Operations

Component	Operation	Description
Power Button	Short press	Power on or off
MODE Button	Short press	Enter the mode selection interface
MODE Button	Short press	Enter the menu selection interface
Select Dial	Rotate	Switch options or adjusts parameter values
	Short press	Confirm selection or exit the current setting
PRESET Button	Short press	Enters the parameter preset interface (20 groups)
LOCK Button	Short press	Lock or unlock the controller panel operations

5. Mode Settings

Short press MODE button to enter the mode select interface. Rotate and short press the select dial to select and enter one of the settings.

5.1 CCT Mode

Brightness Range: 0.0% – 100.0%
CCT Range: 1800 K – 10000 K
GM Range: -100% – +100%

5.2 HSI Mode


Brightness Range: 0.0% – 100.0%
Hue Range: 0° – 360°
Saturation Range: 0% – 100%

5.3 RGBW Mode

Brightness Range: 0.0% – 100.0%
Independent control of Red, Green, Blue, and White channels: 0.0% – 100.0%

5.4 GEL Mode

Brightness Range: 0.0% – 100.0%
Gel Type: R-GEL / L-GEL
R-GEL Groups: COR. / CAL. / SPC. / CINE.
L-GEL Groups: COR. / COLOR. / 600 / COS. / 700
CCT Options: 3200 K or 5600 K
Hue Range: -10° – 10°
Saturation Range: -20% – 20%

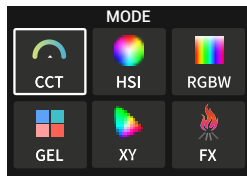

5.5 X-Y Mode

Brightness Range: 0.0% – 100.0%

X Coordinate: 0.0000 – 0.8500

Y Coordinate: 0.0000 – 0.8500

CCT or Color Space: Gamut, Rec. 2020, DCI-P3,

Rec. 709, Black Body

5.6 FX Mode

Select an effect category and short press the select dial to enter parameter adjustment.

Effect	DIM	Color	CCT/HUE	Speed	Others
Flash	0.0% -100.0%	CCT/HSI	1800K-10000K /0-360°	1-100	Mode: Camera Flash /Flash Bulb Trigger: Auto/Manual
Lightning			1800K-10000K /		Times: Random/1-10 Frequency: Random /2-20 Trigger: Auto/Manual
Cloudy		/	/	Random /1-100	Ratio: 10% -90%
Broken Bulb		CCT/HSI	1800K-10000K /0-360°	1-100	/
TV		CCT/HSI	/	1-100	/
Candle		/	/	1-100	/
Fire		/	/	1-100	/
Firework		/	/	1-100	Embers: 1-100
Explosion		CCT/HSI	1800K-10000K /0-360°	1-100	Embers: 1-100 Trigger: Auto/Manual
Welding		CCT/HSI	1800K-10000K /0-360°	1-100	/
Cop Car		Red+Blue, Red, Blue, Blue+ White, Blue+ Yellow, Yellow, Red+White+ Blue, Red+ Yellow+Blue	/	/	Mode: 1-5

Effect	DIM	Color	CCT/HUE	Speed	Others
SOS	0.0% -100.0%	CCT/HSI	1800K-10000K /0-360°	/	/
RGB Cycle		/	/	1-100	SAT: 0%-100%
Party		/	/	1-100	SAT: 0%-100%

Note: All effects can be enabled or disabled. When the trigger is set to Manual, short press the SET Knob to trigger the effect once.

6. Menu Settings

Short press the MENU button to enter the menu selection interface. Rotate and short press the select dial to enter one of the settings.

Icon	Function	Option		Description
	DMX	Address	001-512	Start address
		DMX Mode	01: CCT 8 Bit	8-bit CCT mode
			02: HSI 8 Bit	8-bit HSI mode
			03: RGB 8 Bit	8-bit RGB mode
			04: RGBW 8 Bit	8-bit RGBW mode
			05: X-Y 8 Bit	8-bit X-Y mode
			06: CCT+HSI 8 Bit	8-bit CCT+HSI mode
			07: CCT+RGBW 8 Bit	8-bit CCT+RGBW mode
			08: FX 8 Bit	8-bit FX mode
			09: GEL 8 Bit	8-bit GEL mode
			10: CCT 16 Bit	16-bit CCT mode
			11: HSI 16 Bit	16-bit HSI mode
			12: RGB 16 Bit	16-bit RGB mode
			13: RGBW 16 Bit	16-bit RGBW mode
			14: X-Y 16 Bit	16-bit X-Y mode
			15: FX 16 Bit	16-bit FX mode
			16: GEL 16 Bit	16-bit GEL mode
			17 ULTIMATE 8 Bit	8-bit ULTIMATE mode
			18 ULTIMATE 16 Bit	16-bit ULTIMATE mode
		RDM Status	On	When enabled, the console can set the fixture address and DMX mode
			Off	Disables RDM

Icon	Function	Option		Description
	DMX	DMX Lost	Hold Last Command	Upon loss of valid DMX signal, the fixture continues to use the last received signal.
			Black Out	The fixture turns off immediately
			Black out after 2 min	Upon loss of DMX signal, the fixture holds the last signal for 2 minutes, then turns off. Note: If a valid DMX signal is received within 2 minutes, the fixture will use the new signal.
		Termination	On	Enable internal DMX terminator.
			Off	Disable internal DMX terminator.
		Extend DMX Channels	On	Enable enhanced channel signal.
			Off	Disable enhanced channel signal.
		DMX Table	(Scan the QR code to check the DMX table)	
	CRMX	CRMX	On	Turn On CRMX
			Off	Turn Off CRMX
		Reset	Reset CRMX	
		Status	/	
	Bluetooth	On		Enable Bluetooth
		Off		Disable Bluetooth
		Reset		Reset Bluetooth
		MAC Code		For identifying the fixture
	Network Settings	Network Mode	DHCP	Enable DHCP
			Art-Net 2.x	Enable 2.B.C.D Network
			Art-Net 10.x	Enable 10.B.C.D Network
			Manual	Manually set IP Address, Subnet Mask, and Gateway.
		IP	AAA.BBB.CCC.DDD	Enable DHCP Mode: The IP address is automatically assigned by the DHCP server.
				Enable Art-Net 2.x Mode: The IP address is 2.B.C.D.
				Enable Art-Net 10.x Mode: The IP address is 10.B.C.D.
		Subnet Mask	255.BBB.CCC.DDD	Enable Manual Mode: All four segments of the IP address are customizable. Range: 0 – 255 (AAA, BBB, CCC, and DDD are all 0 – 255).
				Enable DHCP / Art-Net 2.x / Art-Net 10.x: The Subnet Mask is 255.BBB.CCC.DDD and cannot be changed via the menu. Enable Manual Mode: AAA = 0 - 255, BBB = 0 - 255, CCC = 0 - 255, DDD = 0 - 255.
		Gateway	AAA.BBB.CCC.DDD	Enable DHCP Mode: The default gateway is assigned by the DHCP server. Enable Art-Net 2.x Mode: The default gateway is 2.B.C.D. Enable Art-Net 10.x Mode: The default gateway is 10.B.C.D. Enable Manual Mode: AAA = 0 - 255, BBB = 0 - 255, CCC = 0 - 255, DDD = 0 - 255.

Icon	Function	Option		Description
	Art-Net & sACN	Art-Net&sACN	Auto/Art-Net/sACN/Off	Auto: Accepts both Art-Net and sACN protocols. Art-Net: Accepts Art-Net protocol only. sACN: Accepts sACN protocol only. Off: No network protocols are accepted.
		Art-Net Net	0-127	Select the Art-Net network
		Art-Net Sub-Net	0-15	Art-Net Sub-Net 0 – 15 Select the Art-Net sub-net
		Art-Net Port	0-15	Art-Net Port
		Art-Net Universe	0-32767	Art-Net Universe
		sACN Universe	1-63999	sACN Universe
	Accessory Control	/		Specific settings depend on the functions supported by the currently connected accessory.
	Dimming Curves	Linear		/
		S-Curve		
		Exponential		
		Logarithmic		
	Smoothing	Default		Basic smoothing processing for brightness data. Shortened response time.
		Smooth		Smooth processing for brightness data. Ultra-smooth dimming, but slow response time.
		Off		No smoothing processing. Fastest response time.
	Control Mode	Normal		Suitable for normal dimming. Good performance across the entire range with minimal flicker.
		Low Light		Suitable for TV/Film dimming. Excellent performance at low brightness levels, but flicker may occur.
		High Speed		Dimming not supported. No flicker.
		Frequency (Default: 1-10)		Adjustable only in Normal/Low Light modes.
	Color Space	Original Gamut		/
		Correction Gamut		
		Rec.709		
		DCI-P3		
	Display	Display Brightness: 10%-100%		/
	Language	简体中文		Set interface language.
		English		

Icon	Function	Option	Description
	Version& Upgrade	/	1. Download the new firmware to a USB flash drive from the official Godox website. 2. With the device powered off, insert the USB drive with the new firmware into the USB-A port. 3. Power on. The light enters the upgrade interface and automatically returns to the main interface upon completion. Note: 1. Firmware must be downloaded from the official website. The root directory of the USB drive must contain only a single BIN file. 2. USB-A output: 5 V $\leq$ 1.5 A. Do not connect high-power USB devices.
	Factory Reset	No	/
		Yes	Upon confirmation, all parameters are restored to factory defaults. The device reboots automatically, and brightness resets to 100%.
	Fixture Info	/	View Model, Firmware Version, etc.

App Connection Guide

"Godox Light"

Scan the QR code or search for "Godox Light" in the app store to download.



Bluetooth Reset

Go to Menu > Bluetooth > Reset (and confirm).

Bluetooth Pairing

Open the App, select "Add Bluetooth", then search for and connect the device.

NFC Quick Pairing

Enable NFC on your mobile device. In the app, select "Add via NFC", then hold the device close to the NFC area on the fixture to pair automatically.

Firmware Upgrade

In the App device list, tap the ($\vdots$) and select "Firmware Upgrade". The App will automatically check for new versions. Follow the on-screen instructions.

"Godox KNOWLED"

Scan the QR code or search for "Godox KNOWLED" in your app store .
(currently available for tablets only).



CRMX BT to CRMX

1. First, connect the Android/iOS tablet to Godox TimoLink TRX via the CRMX BT module.
2. Then connect Godox TimoLink TRX to CRMX fixtures, or DMX fixtures (used with Godox TimoLink RX).
3. Finally, add the fixtures in "Godox KNOWLED" to control them.

Android/iOS tablet



"Godox KNOWLED" App

Godox TimoLink TRX



Fixture with CRMX



Fixture without CRMX
need to be used with
Godox TimoLink RX

Note: TimoLink TRX and TimoLink RX are sold separately.

Illuminance Data

Normal

CCT	Testing Condition	Unit	1 m	3 m	5 m	10 m
1800 K	Bare Light	lux	9450	1490	504	144
		fc	878	139	47	13
2800 K		lux	19500	3010	1080	309
		fc	1810	279	100	29
3200 K		lux	23300	3570	1270	368
		fc	2160	331	118	34
4300 K		lux	25700	3940	1400	404
		fc	2390	366	130	38
5600 K		lux	25500	3870	1390	402
		fc	2370	360	130	37
6500 K		lux	22100	3360	1210	347
		fc	2050	312	112	32
8500 K		lux	21300	3220	1150	333
		fc	1970	299	107	31
10000 K		lux	22100	3350	1190	345
		fc	2050	311	111	32
R (Red)		lux	3330	512	165	51
		fc	310	48	15	5
G (Green)		lux	9350	1370	480	135
		fc	869	127	45	13
B (Blue)		lux	2040	299	106	31
		fc	189	28	10	3

High Speed

CCT	Testing Condition	Unit	1 m	3 m	5 m	10 m
1800 K	Bare Light	lux	11300	1700	580	164
		fc	1050	157	54	15
2800 K		lux	21200	3220	1150	316
		fc	1970	299	107	29
3200 K		lux	26900	4070	1440	399
		fc	2500	378	134	37
4300 K		lux	30000	4550	1610	445
		fc	2790	423	150	41
5600 K		lux	27300	4130	1460	404
		fc	2540	384	136	38
6500 K		lux	24400	3700	1320	360
		fc	2270	344	123	34
8500 K		lux	23700	3590	1270	348
		fc	2200	333	118	32
10000 K		lux	24100	3630	1280	354
		fc	2240	337	119	33
R (Red)		lux	3330	512	165	51
		fc	310	48	15	5
G (Green)		lux	9350	1370	480	135
		fc	869	127	45	13
B (Blue)		lux	2040	299	106	31
		fc	189	28	10	3

Note: All data are average values measured at 100% brightness.

Technical Data

Product Name	KNOWLED Full-color LED Inflatable Mat Light
Model	AM800R
AC INPUT	100 V – 240 V ~ 50/60 Hz, 900 W (Max.)
CCT Range	1800 K ~ 10000 K
GM Range	-100% ~ 100%
Brightness Range	0.0% ~ 100.0%
Dimming Curves	linear, S-curve, exponential, logarithmic
FX Modes	14 types
CRI≈	96
TLCI≈	98
Protection Rating (Light Body / Controller)	IP65
Controlling Method	DMX/RDM, CRMX, Ethernet, App, Controller
Bluetooth Control Range	Max.60 m
USB-A Port	Firmware update/5V $\equiv$ 1.5A output
Operating Temperature	-20°C ~ 45°C
Dimensions (excluding inflatable butterfly frame and accessories)	AM44R Light Body 1230 × 1230 × 20 mm
Dimension (excluding reflector)	AM800R Controller 183 × 161 × 338 mm
Net Weight (excluding inflatable butterfly frame and accessories)≈	AM44R Light Body 6.6 kg
	AM800R Controller 6.4 kg

Note: Specifications and data may subject to changes without notice.

Maintenance

1. Power off and disconnect the power supply before cleaning. Use a dry, soft cloth only. Do not use alcohol, benzene, or other volatile solvents.
2. Ensure the device has cooled down completely and all cables are disconnected before storage. Store in a dry, well-ventilated environment away from strong magnetic fields.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Note: The Bluetooth RF transmitting module is integrated only within the controller. The LED light fixture has no RF transmitting circuitry and only receives signals.

IC Warning

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

Tout changement ou modification non expressément approuvé par la partie responsable de la réglementation de l'OCDE peut faire perdre à l'utilisateur le droit d'utiliser l'appareil.

Remarque: cet appareil a été testé pour répondre aux limites des appareils numériques de classe B conformément à la partie 15 des règles de la Federal Communications Commission des États - Unis. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans les installations résidentielles. L'appareil génère de l'énergie RF utilisée et rayonne, ce qui peut causer des interférences nocives pour les communications radio s'il n'est pas installé et utilisé conformément aux instructions. Cependant, aucun

Garantie contre les interférences dans une installation spécifique. Si l'appareil cause des interférences nuisibles à la réception de la radio ou de la télévision, qui peuvent être déterminées en éteignant et en allumant l'appareil, l'utilisateur est encouragé à tenter de corriger les interférences par une ou plusieurs des mesures suivantes:

- redirection ou repositionnement de l'antenne de réception.
- augmenter l'espacement entre l'appareil et le récepteur.
- Connecter l'appareil à une prise sur un circuit différent de celui auquel le récepteur est connecté.
- consultez votre revendeur ou un technicien radio / tv expérimenté pour obtenir de l'aide.

Avertissement RF pour les appareils portables:

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux radiofréquences. Équipement Peut être utilisé sans restriction dans des conditions d'exposition portables.

Warning

Operating frequency: 2402MHz – 2480MHz(BT)/2402MHz – 2480MHz(CRMX only receive)
Maximum EIRP Power: 5dBm(BT)

Declaration of Conformity

GODOX Photo Equipment Co., Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states. For more information of DoC, Please click this web link:

<https://www.godox.com/eu-declaration-of-conformity/>

The device complies with RF specifications when the device used at 0mm from your body.

产品保修

尊敬的用户, 本保修卡是申请保修服务的重要凭证, 请您配合销售商填写并妥善保管, 谢谢!

产品信息	型号	产品条形码
用户信息	姓名	联系电话
	通信地址	
销售商信息	名称	
	联系电话	
	通信地址	
	销售日期	
备注		

注: 此表应由销售商盖章确认。

产品信息

本文件适用于相关《产品保修信息》(见后面说明)所列产品,其他非属此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算, 购买日以购买产品时保修卡登记日期为准。

如何获得保修服务

您可直接与产品销售商或授权服务机构联系, 也可拨打神牛产品售后服务电话, 与我们联系, 由我们的服务人员为您安排服务。申请保修时, 您应提供有效的保修卡作为保修凭证, 方可获得保修。如您不能提供有效的保修卡, 则在我们确认产品或部件属于保修范围的情况下, 也可以为您提供保修, 但这不作为我们的义务。

不适用保修情况

如产品存在下列情况，本文件项下的保证和服务将不适用：①产品或部件超过相应保修期；②错误或不适当使用、维护或保管导致的故障或损坏，如：不当搬运；非按产品合理预期用途使用；不当插拔外接设备；跌落或外力挤压；接触或暴露于不适当温度、溶剂、酸碱、水浸或潮湿环境；③由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏；④产品或部件原有识别信息被修改变更或删除；⑤无有效保修卡；⑥使用非合法授权、非标准或非公开发行的软件造成的故障或损坏；⑦因不可抗力或意外事件造成的故障或损坏；⑧其他非因产品本身质量问题导致的故障或损坏。遇上述情况，您应向相关责任方寻求解决，神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的，不是保修范围内的故障。产品使用过程中正常的脱色，磨损和消耗，不是保修范围内的故障。

产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行：

部件	保修期（月）	保修服务类型
内部电路板	12	客户送修
其他（例如光效附件、各类线材或其他包装）	无	无保修

神牛产品售后服务电话 0755-29609320-8062

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note		

Note: This form shall be sealed by the seller.

Applicable Products

Applicable ProductsThe document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items,giveaways and additional accessories attached,etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories isimplemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day(purchase date) when the product is bought for the first time,And the purchase date is considered as the date registered onthe warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases:

① The product or accessory has expired its warranty period; ② Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③ Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; ④ The original identifying information of product or accessory is modified, alternated, or removed; ⑤ No valid warranty card; ⑥ Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦ Breakage or damage caused by force majeure or accident; ⑧ Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Parts	Maintenance Period(month)	Warranty Service Type
Circuit board	12	Customer sends the product to designated site
Other items (optical accessories, cables, package, etc)	No	Without warranty

Godox After-sale Service Call +86-755-29609320(8062)



Wechat
Official Account
神牛微信公众号

制造商：深圳市神牛摄影器材有限公司

地址：深圳市宝安区福海街道塘尾社区耀川工业园厂房 2 栋

电话：0755-29609320（8062） 传真：0755-25723423

邮箱：godox@godox.com 网址：Godox.com

MANUFACTURER:GODOX Photo Equipment Co., Ltd.

Add.: Building 2, Yaochuan Industrial Zone, Tangwei Community,
Fuhai Street, Bao'an District, Shenzhen 518103, China

Tel: +86-755-29609320(8062) Fax: +86-755-25723423

E-mail: godox@godox.com Website: Godox.com

UK
CA

CE

FC



合格证
QC PASS

Copyright © 2026 Godox All Rights Reserved.

中国制造 Made in China